

How to Adjust Volume Levels

You can only control the volume at the near site (your site). You cannot control the volume at the remote site.

On the remote, the **ORANGE** buttons control sound.

- This button increases volume



- This button decreases volume



- This button mutes your microphone



You can also mute your microphone on the microphone

